




User Manual

Flood HogTM

Model:
7000LX

REV. 2/15/23

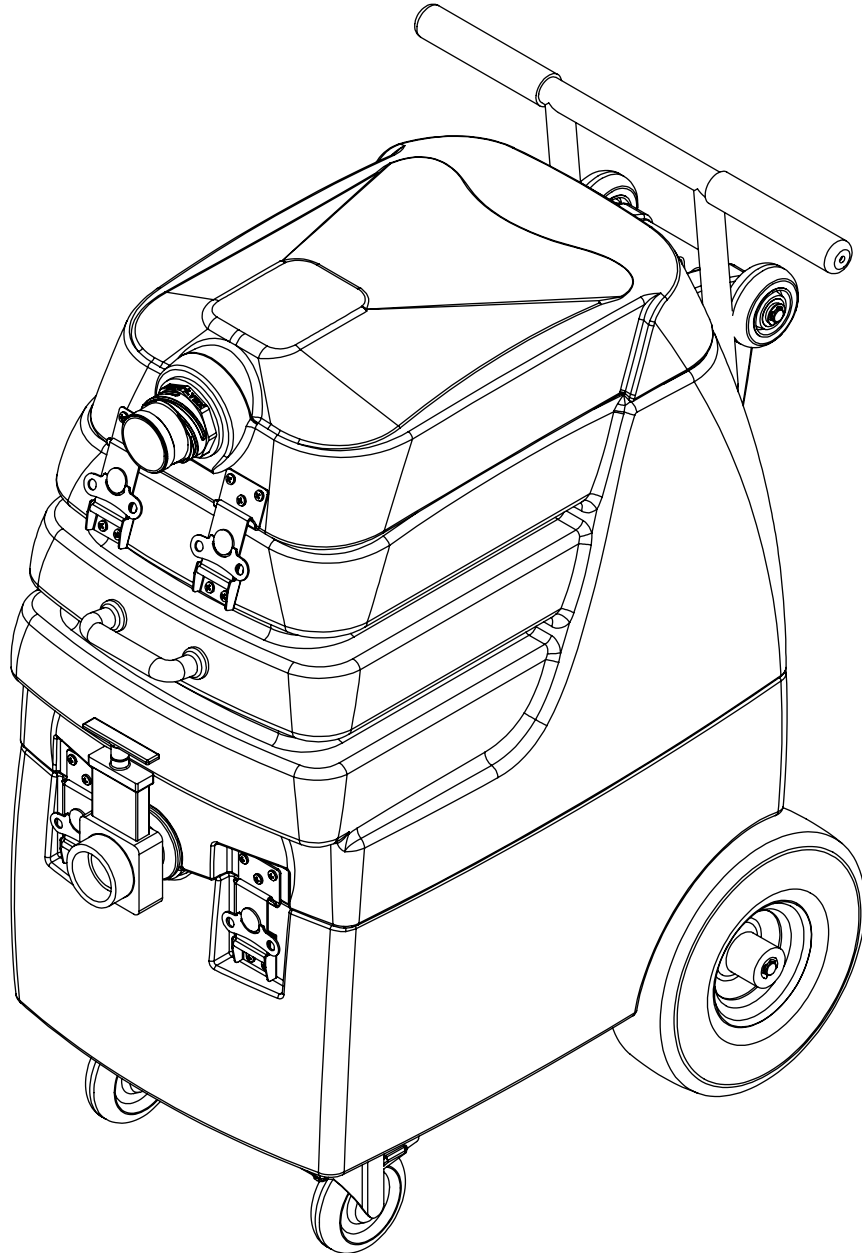

13655 Stowe Dr. Poway, CA 92064

P: (858) 679-1191

F: (858) 726-6005

www.mytee.com

Dear Customer:

Congratulations on the purchase of your new Flood Hog™ Flood Extractor.

As technology continues to develop you can work confidently knowing that both Mytee and its employees are equally dedicated to developing with the industry and its advances.

Like any other piece of machinery or technology, the 7000LX also requires proper maintenance and care to keep the product working over extended use. Neglecting your machine, abusing it or not operating it properly can void its warranty and prevent the machine from performing to the quality and standard you'd expect out of the Mytee line.

If you have any warranty concerns or questions, please review this manual thoroughly or do not hesitate to contact your distributor. If there are questions regarding maintenance, replacement, or ordering parts please contact an authorized Mytee Service Center. To see an updated list please visit our website at <http://www.mytee.com/support/service-centers>.

Before using your Mytee product, please read this manual thoroughly.

Sincerely,

Mytee Customer Care Dept.

	Important Safety Information	4
1	At a Glance	6
	1.1 - Technical Specifications	6
	1.2 - Included with the Flood Hog™	6
	1.3 - Flood Hog™ Front View	7
	1.4 - Flood Hog™ Rear View	8
	1.5 - Switch Plate	9
2	Machine Operation	10
	2.1 - Powering the Flood Hog™	10
	2.2 - Connecting Vacuum Hose	10
	2.3 - Connecting Pump-Out Hose	10
	2.4 - Switching On the Flood Hog™	10
	2.5 - Flood Extraction	10
	2.6 - Emptying the Recovery Tank	10
3	Machine Maintenance	11
	3.1 - Opening the Flood Hog™ for Internal Maintenance	11
	3.2 - Regular Maintenance	11
4	Accessories For Your Flood Hog™	12
5	Troubleshooting	13

Important Safety Information

Please read and understand this manual completely before operating this machine.

Grounding Instructions

This machine must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.



DANGER

Improper installation of the equipment-grounding conductor can result in a risk of electric shock. Be sure to check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. If the plug will not fit in the outlet do not modify the plug or the machine's cord, instead have a proper outlet installed by a qualified technician.


This machine is for use on a nominal 120-volt circuit and with a grounding plug similar to the one in Figure 1 below. If a proper outlet is not available, follow the illustrations of Figure 2 & 3 to install a temporary-grounding plug. This temporary work-around should be used only until a proper outlet (Figure 1) can be installed by a qualified electrician. When and if this type of adapter is employed, screw the adapter's extended tab into place with a metal screw. However, grounding adapters are not approved for use in Canada.

Again, be sure to check the grounding pin for damages and replace if necessary.

The Green, or Green-Yellow, wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to only the grounding pin.

DO NOT use extension cords.

Please Note for America use only.

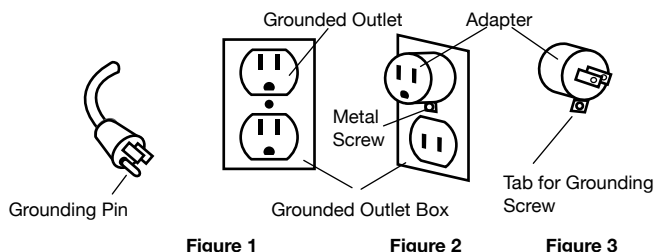

Parts and Service

Please contact Mytee service personnel or a Mytee authorized Service Center using Mytee original replacement parts and accessories if repairs need to be performed. When and if calling Mytee for support, please have your Model and Serial Number available for faster assistance.

Name Plate

The Model and Serial Number are located on the lower half of the back of the machine near the power plug and will be required for ordering replacement parts. You can use the space provided in this manual to note down both for future referencing.

Unpacking the Machine

When your new machine is delivered, please carefully inspect both the shipping carton and the machine for damages. If damage is evident, save both the shipping carton and machine so that the delivering carrier can inspect it. Contact the carrier immediately to file a freight claim if there has been any damage.

Caution and Warnings

Symbols

Mytee uses the symbols below to signal potentially dangerous conditions. Always read this information carefully and take the necessary steps to protect personnel and property.



DANGER

Is used to warn of immediate hazards that will cause severe personal injury or death.



WARNING

Is used to call attention to a situation that could cause severe personal injury.



CAUTION

Is used to call attention to a situation that could cause minor personal injury or damage to the machine or other property. When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this machine. This product is intended for commercial use only.

Important Safety Information

To reduce the risk of fire, electrical shock, or injury:


- 1.** Read all instructions before using equipment.
- 2.** Use only as described in this manual. Use only manufacturer's recommended attachments.
- 3.** Always unplug power cord from electrical outlet before attempting any adjustments or repairs.
- 4.** Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- 5.** Do not pull or carry by cord. Do not close a door on cord or pull cord around sharp edges or corners.
- 6.** Do not run appliance over cord. Keep cord away from heated surfaces.
- 7.** Do not use with damaged cord or plug. If cord is damaged, repair immediately.
- 8.** Do not use outdoors or on wet surfaces and/or standing water.
- 9.** Always unplug or disconnect the appliance from power supply when not in use.
- 10.** Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 11.** Do not use in areas where flammable or combustible material may be present.
- 12.** Do not leave the unit exposed to harsh weather elements. Temperatures below freezing may damage components and void warranty.
- 13.** Use only the appropriate handles to move and lift unit. Do not use any other parts of this machine for this purpose.
- 14.** Keep hair, loose clothing, fingers, and all parts of the body away from all openings and moving parts.
- 15.** Use extra care when using on stairs.
- 16.** To reduce the risk of fire or electric shock, do not use this machine with a solid-state speed control device.
- 17.** The voltage and frequency indicated on the name plate must correspond to the wall receptacle supply voltage.
- 18.** When cleaning and servicing the machine, local or national regulations may apply to the safe disposal of liquids which may contain: chemicals, grease, oil, acid, alkalines, or other dangerous liquids.
- 19.** Do not leave operating unattended.

1 - At a Glance


1.1 - Technical Specifications

Recovery Tank	12 Gallons
Vacuum	Dual Mytee® Hybrid Ametek vacuum motors
CFM	225-250
Water Lift	182"
Pump-Out GPM	66
Power Consumption	Cord 1: 18 amps @ 115V 60Hz Cord 2: 13 amps @ 115V 60Hz
Machine Weight	124 lbs.
Machine Dimensions	29" x 17.5" x 35"
Power Cord	Dual 50' 12/3

1.2 - Included with the Flood Hog™

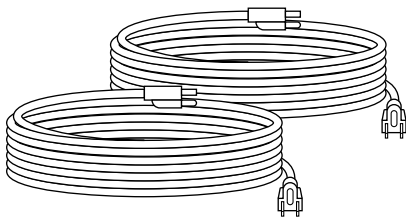


2x E530 Extension Cords, 50' 12/3

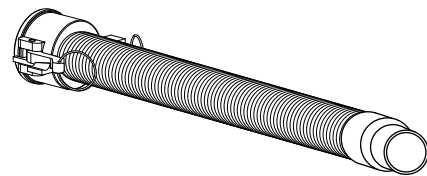

A294 Pump-Out Hose, 25'

1.3 - Flood Hog™ Front View

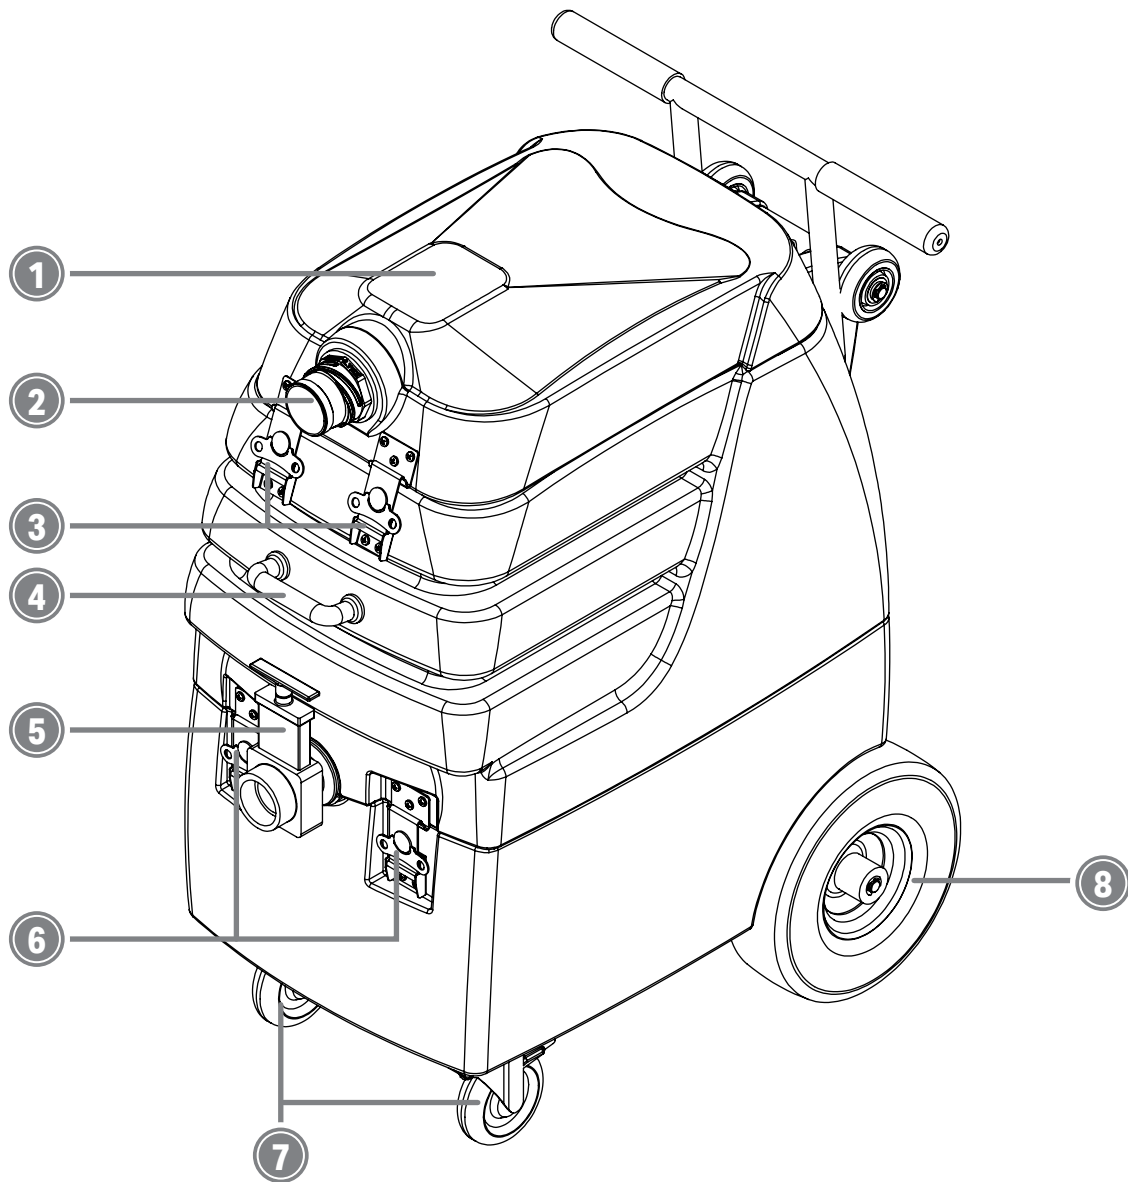


- 1. Recovery Tank Lid
- 2. 2" Cuff-Lynx™ Male Starter
- 3. Recovery Tank Lid Latches
- 4. Front Handle

- 5. Recovery Tank Drain
- 6. Maintenance Access Latches
- 7. Front 4" Locking Casters
- 8. 10" Foam-Filled Wheels

1 - At a Glance


1.4 - Flood Hog™ Rear View

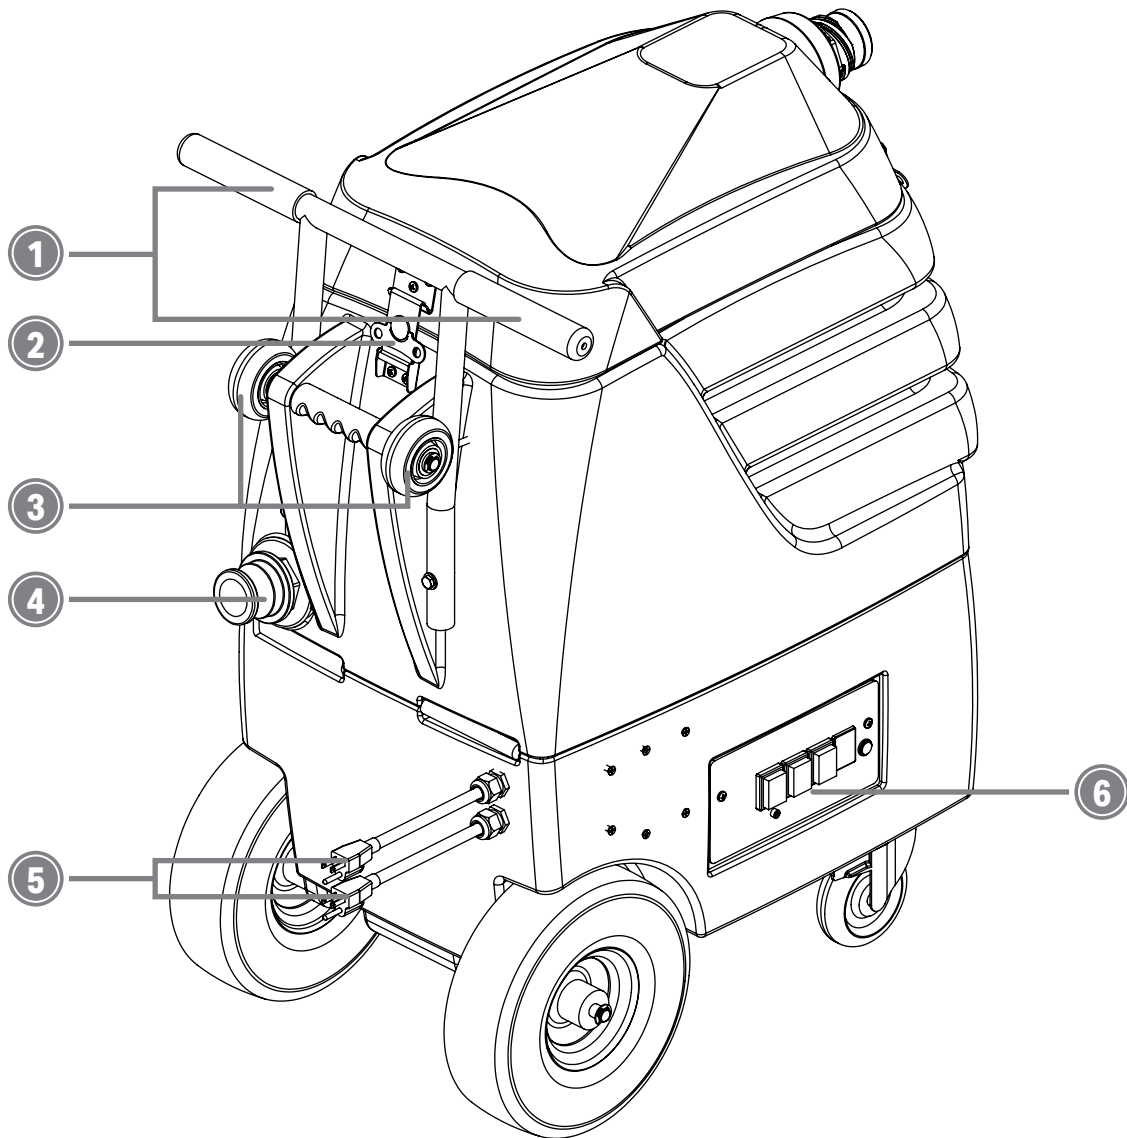

- 1. Rear Handle
- 2. Recovery Tank Lid Latch
- 3. Rear Upper Wheels

- 4. Pump-Out Hose Connection
- 5. Dual Power Cord Pigtails
- 6. Switch Plate


1.5 - Switch Plate

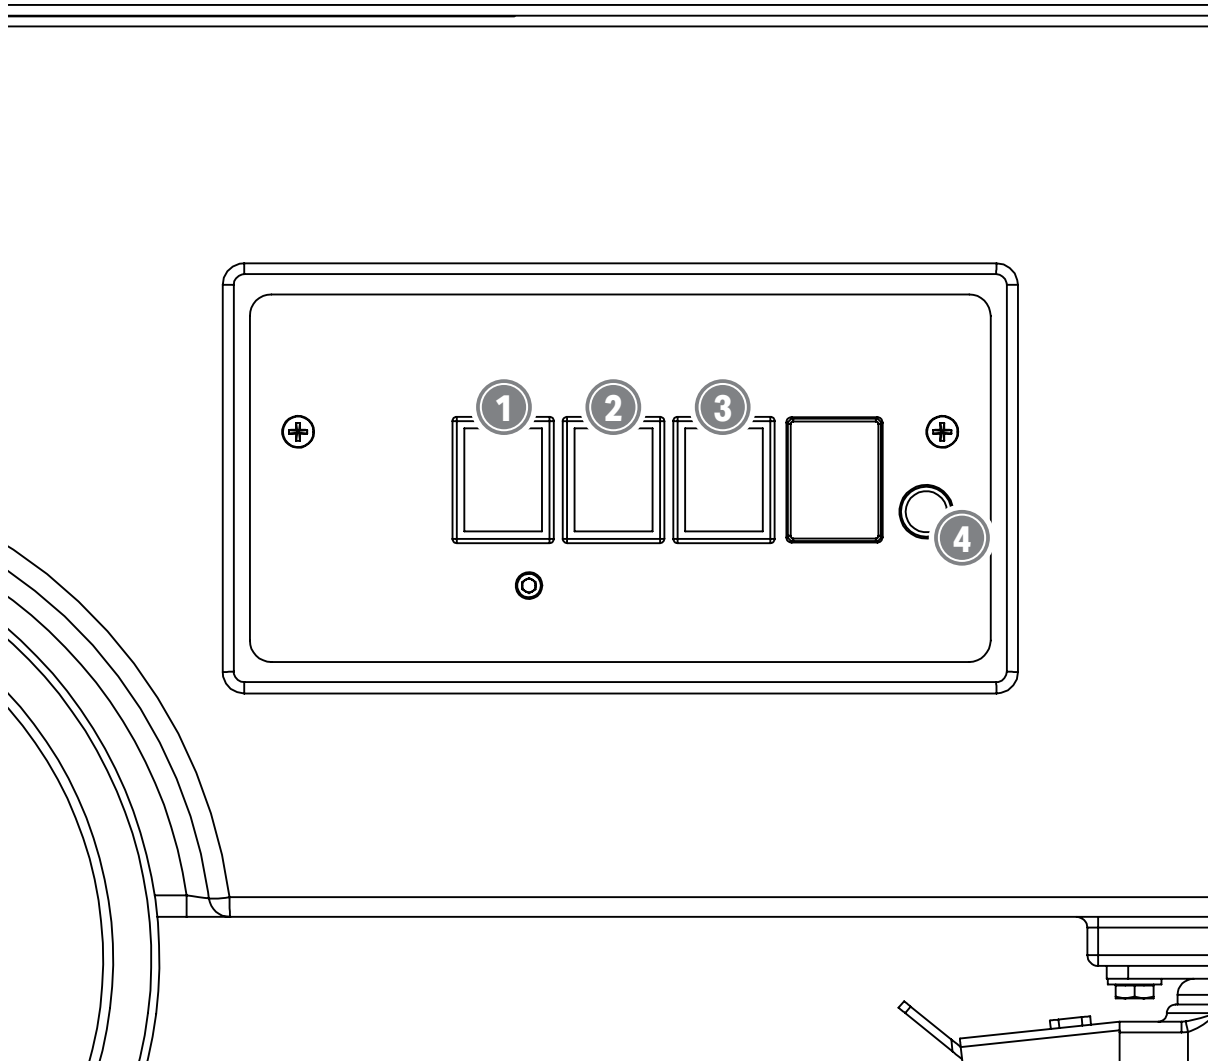

- 1. Vacuum Switch 1
- 2. Vacuum Switch 2


- 3. Pump-Out Switch
- 4. Dual Circuit Indicator Light

2 - Machine Operation

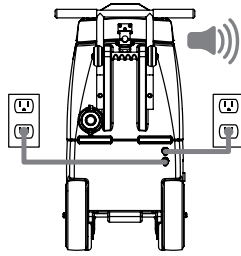


2.1 - Powering the Flood Hog™

Each power cord on the Flood Hog™ requires a grounded 20 amp outlet. The dual circuit indicator light and tone will activate when this is achieved. If only one 20 amp power outlet is available, just the primary cord can be used, which powers one vacuum and the pump-out. ♦

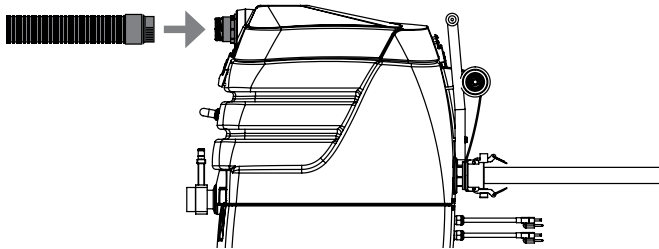

2.2 - Connecting Vacuum Hose

Vacuum hose can be connected to the Cuff-Lynx™ connection on the front of the lid on top of the machine. ♦

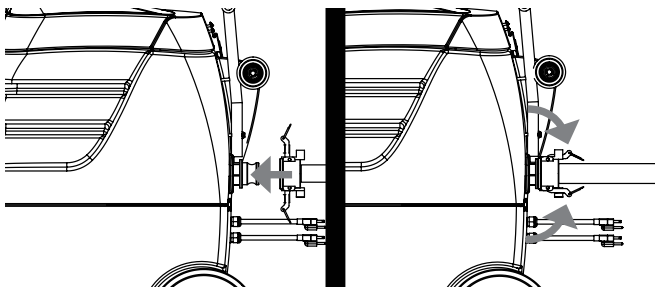


2.3 - Connecting Pump-Out Hose

Attach the pump-out hose to the Auto Pump-out fitting. Secure the hose to the fitting using the cam lock. Push the hose cuff onto the fitting, making sure the silver ears and rings are extended forward. Pull the ears down using the rings until connection is tight. Place the end of the hose in a location where dirty water can drain. ♦


2.4 - Switching On the Flood Hog™

The switch plate is on the left side of the base of the machine. Switch on the vacuums using the two vacuum switches. Switch on the pump-out using the pump-out switch. ♦

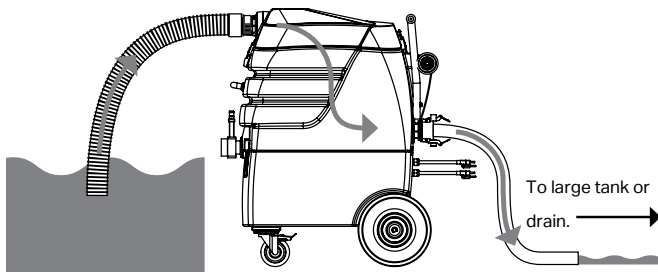

2.5 - Flood Extraction

In shallow or light flooding situations, a flood wand can be used (included in the A138 Accessory Kit) for flood extraction. For heavier flooding situations, a stand-on flood extraction tool can be used or just a vacuum hose (included in the A138 Accessory Kit). ♦

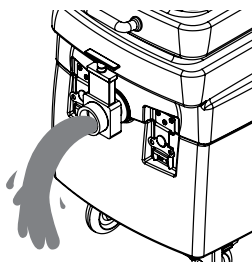



2.6 - Emptying the Recovery Tank

The recovery tank can be emptied using the pump-out feature or via the tank drain valve on the front of the machine. ♦

3 - Machine Maintenance

In order to keep the Flood Hog™ running smoothly and reduce the risk of damage to the machine and subsequent downtime, Mytee recommends following the maintenance schedule below:

Maintenance Item	Daily	Weekly
Clean and inspect tanks.	X	
Clean and inspect hoses.	X	
Check and clean strainer basket.	X	
Check power cable.	X	
Clean machine with all-purpose cleaner and cloth.	X	
Inspect vacuum hoses for holes and loose cuffs.		X
Lubricate wheels with water resistant oil.		X
Inspect machine for water leaks and loose hardware.		X

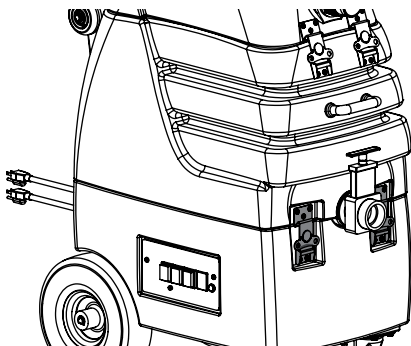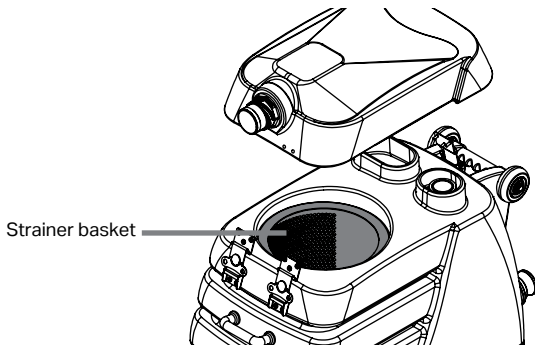

3.1 - Opening the Flood Hog™ for Internal Maintenance


The Flood Hog™ can be opened for maintenance via the two lower latches on the front of the machine. ♦

3.2 - Regular Maintenance


To keep the Flood Hog™ running smoothly for a long time, regular maintenance is necessary. Regularly inspect and clean the strainer basket, recovery tank, and all hoses. Also keep all wheels lubricated and check for leaks or loose hardware. ♦

4 - Available Accessories


The A138 Flood Hog™ Accessory Kit Contains:

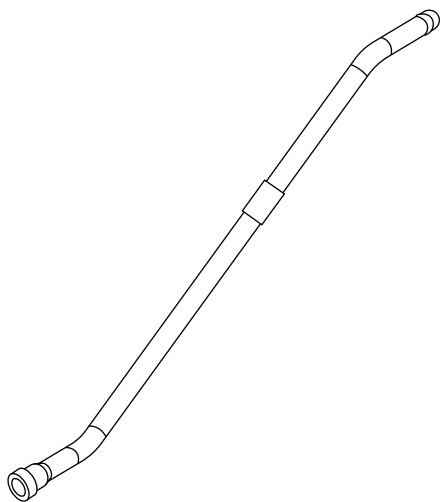


H908 - S-Bend Swivel Wand Tube

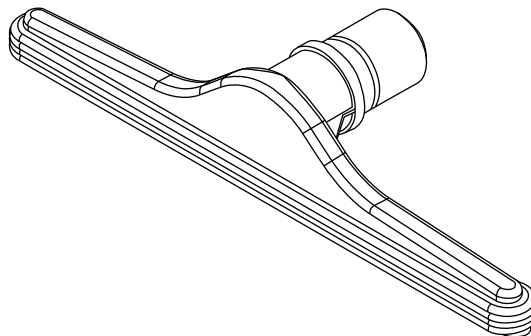

P570 - Scalloped Head

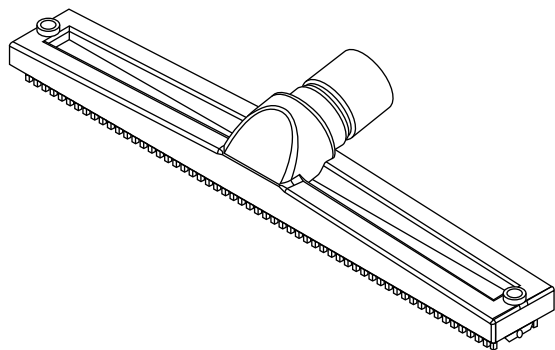

G200 - Squeegee Head

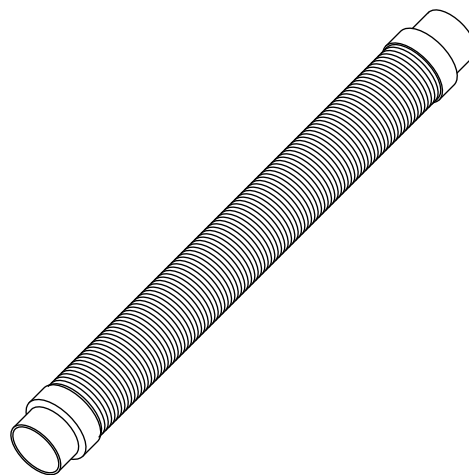

H294 - 25' x 1.5" Extraction Hose

5 - Troubleshooting

Issue	Possible Cause	Solution
Machine is not turning on.	Power cord unplugged.	Plug the power cord into a grounded 20 amp outlet.
	Circuit breaker tripped in building.	Reset breaker in building.
	Faulty switch or power cord.	Contact a Mytee Service Center.
Vacuum not producing suction.	Vacuum tank is full.	Empty vacuum tank.
	Vacuum hose blockage.	Check for blockages in vacuum hoses inside and outside machine.
	Clogged filter in vacuum tank.	Clean out filter regularly.
	Hose cuffs are loose and causing air leakage.	Tighten all hose cuffs regularly as may loosen over time.
	Lid on tank is loose and is causing air leakage.	Make sure the lid is tight.
Blows water out exhaust.	Foam building up inside vacuum tank.	Use a defoaming solution in vacuum tank.
Vacuum makes loud grinding noise.	Debris has been sucked into the vacuum motor chamber. Usually results from dry vacuuming.	Replace the vacuum motor. To avoid repeat problem, DO NOT dry vacuum with your extractor.
No water flow from pump-out.	Filter is clogged.	Clean the filter.
	Kinked hose inside the machine.	Open the machine and check hoses. If any hoses are kinked, undo the kink.

NOTES



Mytee, LLC

13655 Stowe Dr.

Poway, CA 92064

www.mytee.com

© 2023 Mytee, LLC

Printed in the USA