

2020 Best Of Innovation TISE  
2018 Best New Product ISFA

# NO LIFT INSTALL SYSTEM

## FULL HEIGHT BACKSPLASH SLIDERS




### IMPORTANT

Before using Full Height Backsplash Sliders, make sure nylon transfer balls are clean and free from grit. Clean the transfer balls with a air hose if necessary.

We recommend applying protective film (included) on surface of backsplash prior to installation to prevent possible marking or scratches on finished surface.

### EASILY INSTALL FULL HEIGHT

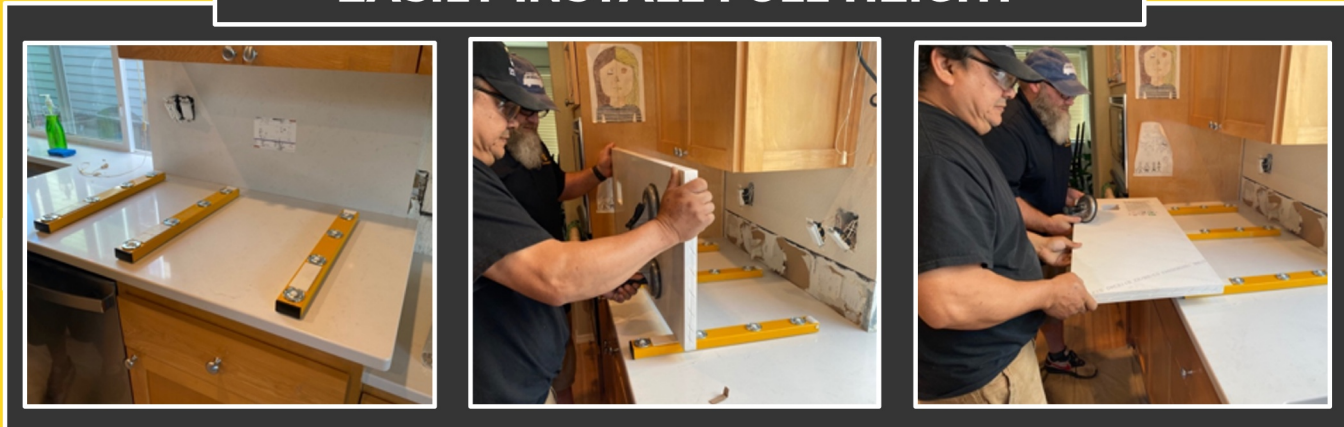

#### Directions:

1. Evenly space sliders on countertop with roller wheel facing back wall
2. Position sliders so that roller wheel is 3-4" from back wall
3. Set backsplash on sliders with polished/finished surface down on roller transfer balls
4. Line up splash with plug cut outs and cabinet walls
5. Push backsplash against back wall, then tip up into place
6. Tip backsplash down onto sliders to apply adhesive before final installation



Protect your business...  
and the professionals in your install department.

[NoLiftSystem.com](http://NoLiftSystem.com)